

ACO DriveDrain® is a practical, lightweight drainage system for use in light duty areas around the home and garden.


DriveDrain® is easy to install and is available with end caps and bottom outlets to provide easy water runoff.

DriveDrain® is strong enough to withstand slow moving vehicles and is ideal for around patios, swimming pools, barbecue areas, tennis courts and in front of garage doors.


### Features

- 1 metre long plastic channel with choice of push-fit grates
- Able to support a 5 tonne vehicle
- Compatible with standard 90mm diameter stormwater pipe connection



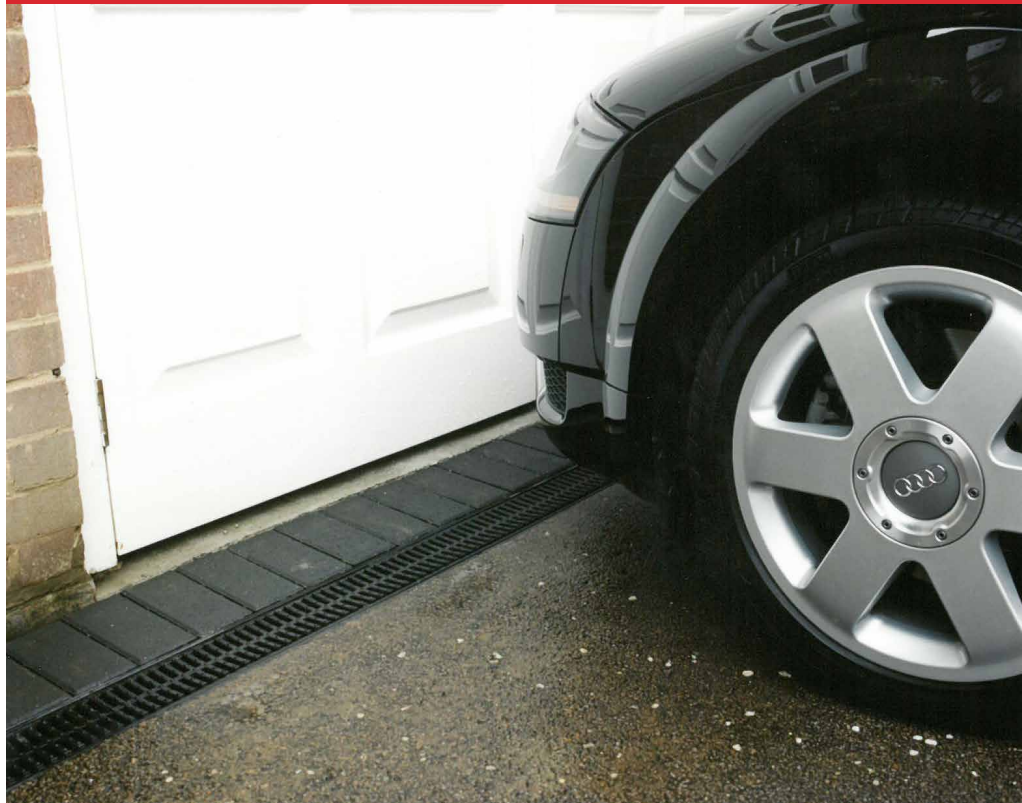

## DriveDrain®

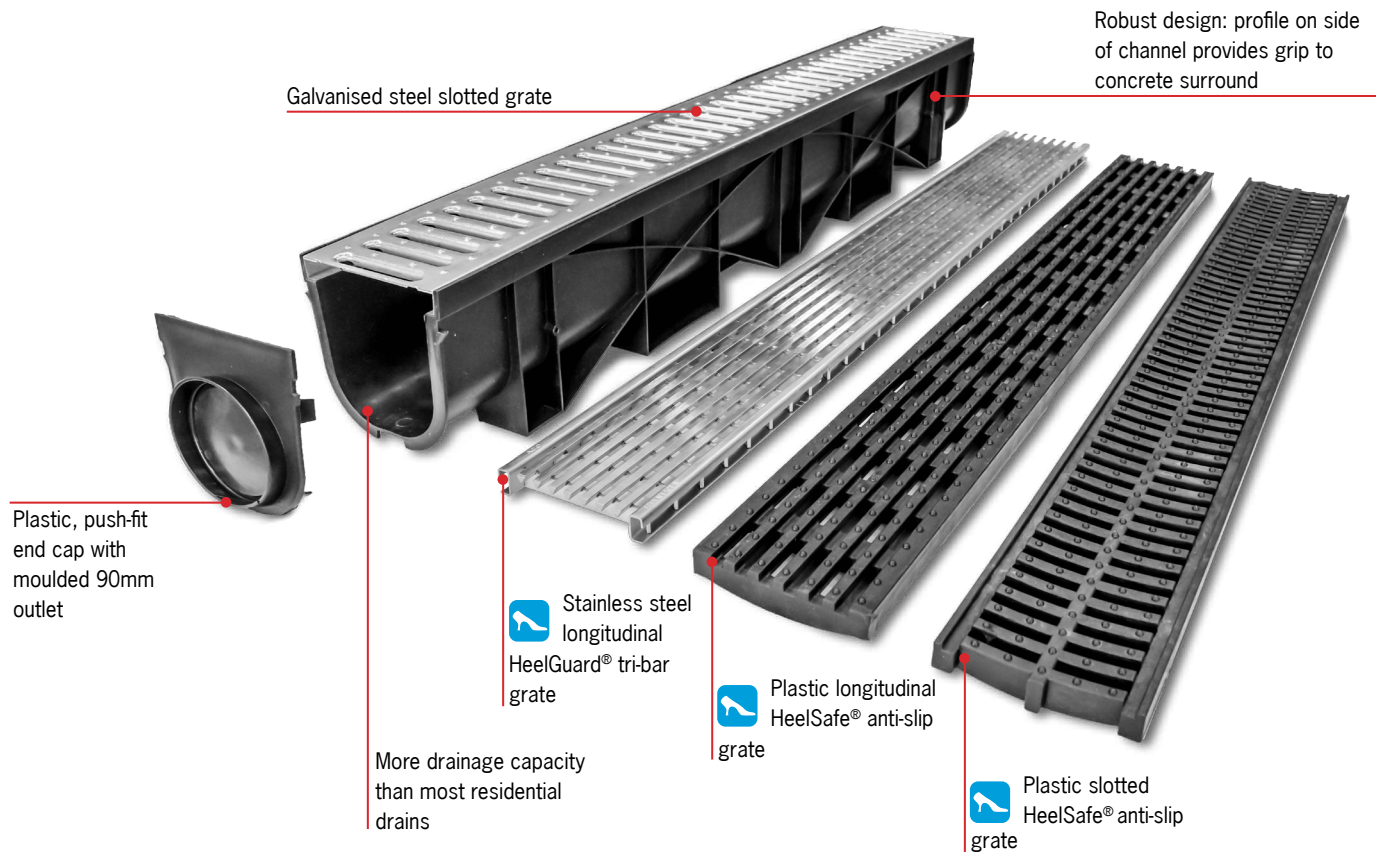

### Product Overview



**Product Table**

Design	Part No	Length mm	Width mm	Height mm	Weight kg
DriveDrain® black plastic channel	<b>82892</b>	1000	130	155	2.4
 DriveDrain® black plastic HeelSafe® longitudinal grate	<b>82894</b>	1000	125	-	0.5
 DriveDrain® black plastic HeelSafe® slotted grate	<b>82895</b>	1000	125	-	0.5
 DriveDrain® galvanised steel slotted grate	<b>82893</b>	1000	125	-	2.7
 DriveDrain® stainless steel HeelGuard® longitudinal grate	<b>296000</b>	1000	125	-	3.2
DriveDrain® 90mm dia inlet/outlet endcap	<b>82890</b>	-	130	155	0.5

HeelGuard® - slots 10mm or less to prevent stiletto style heels becoming trapped. HeelSafe® - offer anti-slip properties in addition to slots 10mm or less.

**Installation Instructions**



**1 EXCAVATE**  
Excavate trench and fix a line to determine the alignment and finished height of proposed channel run.



**2 LAY A FIRM BASE**  
If drain is to be trafficked by vehicles, lay a bed of good quality concrete. Otherwise, use compacted fill along base of the trench.



**3 CUT THE OUTLET**  
Cut out preformed outlet located in base of the channel to allow connection to drain pipe.



**4 ASSEMBLE THE COMPONENTS**  
Connect channels together and fit end caps.



**5 PREPARE FOR BACKFILLING**  
Mask along the grates over entire run length. Lower channel assembly into excavated trench, seal to drain pipe and pack to correct level.



**6 COMPLETE THE INSTALLATION**  
Surround channel run with backfill or concrete. Ensure that it is finished 2-3mm above grate. Remove all grates. Remove masking tape and any debris from channels. Ensure outlets are clear. Replace grates.

These illustrations are for guidance only, professional guidance should be sought.

**ACO Self Point Drains & polymer concrete line drains also available**



**ACO Limited**

Unit I/6 Percival Gull Place  
Mangere, Auckland 2022  
New Zealand

Tel: 0800 448 080  
Tel: +64 (0)9 815 9500  
Fax: +64 (0)9 255 5114

**Electronic Contact**  
info@aconz.co.nz  
www.acoself.co.nz

